

# THUNDER 1200

---

*2-in-1 Outdoor blinder*



## USER MANUAL

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE



# 1.OVERVIEW

## THUNDER 1200

*2-in-1 Blinder - 1200 4-in-1 1W LEDs*

Thunder 1200 is an outdoor blinder that sports 1200 x 5054 SMD 1W RGBW LEDs. Designed to endure the most demanding situations, the fixture has IP65 degree of protection. Its LEDs are high-brightness quad-colour LEDs, allowing a smooth RGBW mix without multicoloured shadows, achieving a very broad spectrum of deeply saturated colours. Usable as a flash effect or a washer, Thunder 1200 is ideal for medium and large scale applications for its power and versatility.

### Source & Optics

Light Source: 1200 x 1W RGBW SMD 5054 LEDs  
LEDs life: 50,000 hours  
Beam angle: 120°

### Control

DMX channels: 8/18

Operation modes: DMX, auto & Master/Slave

### Effects & Functions

2-in-1: Blinder + Wash light  
High-power LEDs  
4-in-1 LED technology: Smooth RGBW color mixture without multi-color shadows  
Rainbow effect  
5 LED zones  
Dimmer: 0-100% electronic linear  
Strobe effect: 0-20Hz

### Electrical

Input voltage range: 115–230V, 50-60Hz  
Max power consumption: 1200W

### Physical

IP65 Certificate  
LCD Display  
DMX connectors: 2 Outdoor XLR3  
Power Supply: In/Out outdoor power supply connectors  
Dimensions: 680x310x180 mm. / 26.7x12.2x7 in.  
Weight: 12 Kg. / 26.5 Lbs.

## 2.MENU

Digital Menu				
No.	Menu	Item	Select	Function
1	<Addr>		A.001-A.512	DMX Address
2	<rUnd>		5LAU	Slave
			Aoto	Auto
			5ond	Sound
3	<Chnd>		7CH	7 Channel Mode
			18CH	18 Channel Mode
4	<TooL>	<bALA>	5U	ON/OFF (default OFF)
			<rEd >R	50-255 (default 255)
			<9rEE>G	
			<bLUE>B	
			<UHIt>W	
		<CLEA>	OFF	OFF
			ON	ON (default)
		<dEFC>	OFF	Return
			ON	Restore Default Settings
5	<NAN>	CH.01	H.000-H.255	Dimmer
		CH.02		Strobe
		CH.03		Strobe Speed
		CH.04		R
		CH.05		G
		CH.06		B
		CH.07		W

		CH.08		ColorM
		CH.09		ColorF
		CH.10		Case
		CH.11		CaseSP
		CH.12		CaseFad
		CH.13		CaseR
		CH.14		CaseG
		CH.15		CaseB
		CH.16		CaseW
		CH.17		CaseDim
		CH.18		BackDim
6	<INFo>	tInE	0000-9999	Use time (hour)
		VEr	Uxxx	Display software version number
		tEnP	t.xxx	(°C )
7	<rE5t>		OFF	Machine reset closed
			ON	Machine reset open
Press ESC: to return to the previous menu interface;				
Key UP: Turn down the menu (or value + ); (The value displayed after long press 1S plus)				
Key DOWN: Turn up the menu (or value - ); (numerical display long press 1S after the reduction)				
Press ENTER: to enter the menu settings or save the settings and return to the previous menu				

### 3.DMX CHANNELS

7 Chann el	18 Chann el	Function	Value	Function Description
1	1	Dimmer	0-4	Close
			5-255	From dark to bright
2	2	Strobe	0-4	Close
			5-54	Random Strobe
			55-104	Fade In
			105-154	Fade Out
			155-204	Pulse Strobe
			205-255	Strobe
3	3	Strobe Speed	0-255	Speed from slow to fast
4	4	R Dimmer	0-255	Red color from dark to bright
5	5	G Dimmer	0-255	Green color from dark to bright
6	6	B Dimmer	0-255	Blue color from dark to bright
7	7	W Dimmer	0-255	White color from dark to bright
	8	Color Mode	0-4	No Effect
			5-14	R
			15-24	G
			25-34	B
			35-44	Yellow
			45-54	Cyan

			55-64	Magenta
			65-74	W
			75-199	Color jump slow to fast
			200-255	Random color slow to fast
	9	Color Gradient	0-7	No Effect
			8-39	Red to Yellow
			40-71	Yellow to Green
			72-103	Green to Cyan
			104-135	Cyan to Blue
			136-167	Blue to Magenta
			168-199	Magenta to Red
			200-255	Color gradient slow to fast
	10	Built-in Effect	0-4	No Effect
			5-255	Water Flow
	11	Effect Speed	0-255	slow to fast
	12	Effect Gradient	0-255	
	13	Effect R	0-255	Effect Red dimming from dark to bright
	14	Effect G	0-255	Effect Green dimming from dark to bright
	15	Effect B	0-255	Effect Blue dimming from dark to bright
	16	Effect W	0-255	Effect White dimming from dark to bright
	17	Effect Dimmer	0-255	Effect dimming from dark to bright

	18	Background Dimmer	0-255	Background dimmer dimming from dark to bright
--	----	-------------------	-------	---

## 4. EQUIPMENT CLEANING

The luminaire must be cleaned regularly so that the lighting effect will be better. The frequency of cleaning depends on the environment. Humidity, excessive smoke, and a particularly dirty environment can make the lens dusty.

- Use soft linen and special glass cleaners;
- Dry the parts carefully;
- At least once every 20 days you have to clean the outside of the fixture and clean it at least every 30 days or 60 days